

Honda Remote Engine Start II Quick Start Guide

• Transmitter Appearance



• Display icons (example)

	Engine is running by Remote Start.		Engine is stopping.
	Reception has been completed.		Reception has failed.
	The vehicle condition is being checked.		Remaining time of idling (Indicates that remaining time of idling is 10 minutes.)
	In-car temperature * (Indicates that in-car temperature is in Level 3.)		Updated driver ID * (Indicates that updated driver ID is 1.)

* Depending on vehicle equipment and model year, above indicators may not be shown on the display.

• Major operation method

Push following button(s) to operate the function.

Engine start-stop function/check the vehicle condition

- To start engine / extend idling time (20-minute mode)



- To stop engine



- To check the vehicle condition

 


Keyless function

- To lock the doors




- To set the panic mode



- To unlock the doors



 - To open the trunk



Note: This guide is only use to help you get acquainted to your Remote Engine Starter. You should always check the User's Information Manual for more operation informations and safety features.


About This Quick Start Guide:

This Quick Start Guide has been prepared to help you get quickly acquainted with your Remote Engine Starter. However, this guide is not intended as a substitute for the User's Information Manual. For a complete information on operating your Remote Engine Starter, please refer to the User's Information Manual. (Refer to the User's Information Manual for the Automatic Defrost Function)


Safety Reminder:

NOTICE

- Carbon monoxide gas is toxic and can rapidly accumulate in closed or even partly enclosed areas. Breathing it can cause unconsciousness and even kill you. Never use the remote engine starter with the vehicle parked in a garage or other areas with limited ventilation.

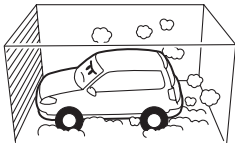

- Do not start the engine with the remote engine starter before removing a body cover. The engine and exhaust heat can cause a fire.

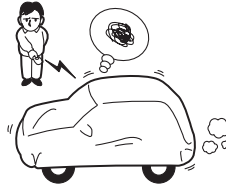

6410040B


- Do not start the engine with this remote engine starter near flammable material such as dead grass, paper, oil, grease, wood, etc. The heat from the exhaust pipe can ignite the flammable material.



6410050B

How to Improve Transmitter Range:

- The transmission and the reception ranges of the electric wave change depending on the direction of the transmitter. Generally, to send the electric wave further, operate a transmitter at the height of the shoulder horizontally.

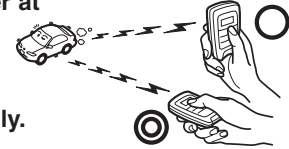

B426080H

The transmitter range is 400 ft (120 m) (approximately 600 - 1,500 ft (180 - 450 m) in open area). Depending on where you are, you may experience reduced range reception. Please see the User's Information Manual for more details.